




# BUTLER

## SKYMASTER GMT

Miyota  
Caliber 9075

## User Manual

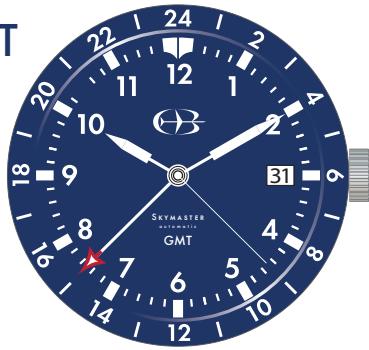

## Premium Series Automatic SKYMASTER GMT

Vibration Frequency 28800 bph

24 Jewels


42 hour power reserve

Accuracy: +30 / -10 seconds per day

Automatic winding and manual winding mainspring

Please refer to butlerwatch.com should you have questions about the Skymaster GMT. These instructions are available @ [butlerwatch.com/instructions/Skymaster\\_GMT\\_Inst.pdf](http://butlerwatch.com/instructions/Skymaster_GMT_Inst.pdf)

### Display Elements:

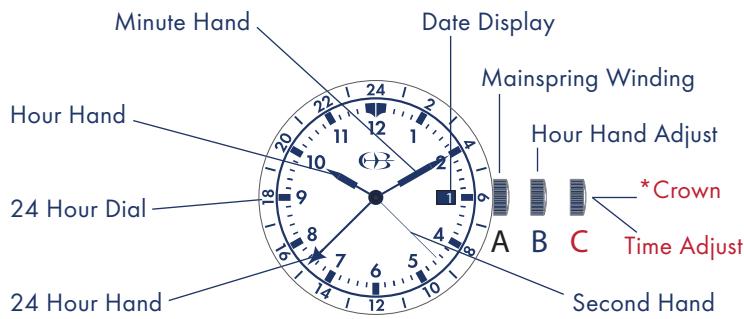

#### \*Important - Each Operation requires unscrewing the Crown first.

The crown must be carefully and lightly unscrewed prior to any watch setting operation. After setting the watch, the crown must be carefully and lightly screwed down to secure it.

### Adjusting Date and Time

- 1 Pull the **Crown** to position **C**. Set the 24 Hour Hand and Minutes Hand to desired time.
- 2 Return the **Crown** to position **A**.
- 3 Next, pull the **Crown** to position **B** to set the Hour Hand and Date to local time.

When the hour hand turns twice, the date will change by one day.

When setting the time, pay attention to AM or PM.

When/if setting the time counterclockwise between 21:00 and midnight, set it back until the date switches to the previous day.

### Manually Winding the Mainspring

- 1 Carefully, unscrew the **Crown** counterclockwise and ensure position **A**.
- 2 Turn the **Crown** clockwise 15 - 20 times until **Second Hand** starts to move naturally.
- 3 Carefully and lightly, screw the **Crown** down clockwise. Take care to ensure proper thread engagement.

Automatic winding occurs with movement of an oscillating weight inside the watch case.

### Adjusting Hour Hand

- 1 Pull out the **Crown** to position **B** (the watch continues to run).
- 2 Turn the **Crown** to reach the desired hour.
- 3 Push the crown back to position **A**. Carefully and lightly, screw the **Crown** down clockwise. Take care to ensure proper thread engagement.

The Miyota 9075 movement allows changing the hour hand independently, without stopping other hands.

### \*Important

Exercise delicate care when unscrewing and screwing down the crown. Thread damage can occur as a result of mishandling.

Warranty is invalid if damage occurs due to an improperly secured crown.

### \*Important

Do not wear your watch in water or submerge your watch in water unless the crown is properly secured. Always double check your crown prior to using your watch in or near water.

Warranty is invalid if water damage occurs due to an improperly secured crown.